


Plastic Strapping Tensioner

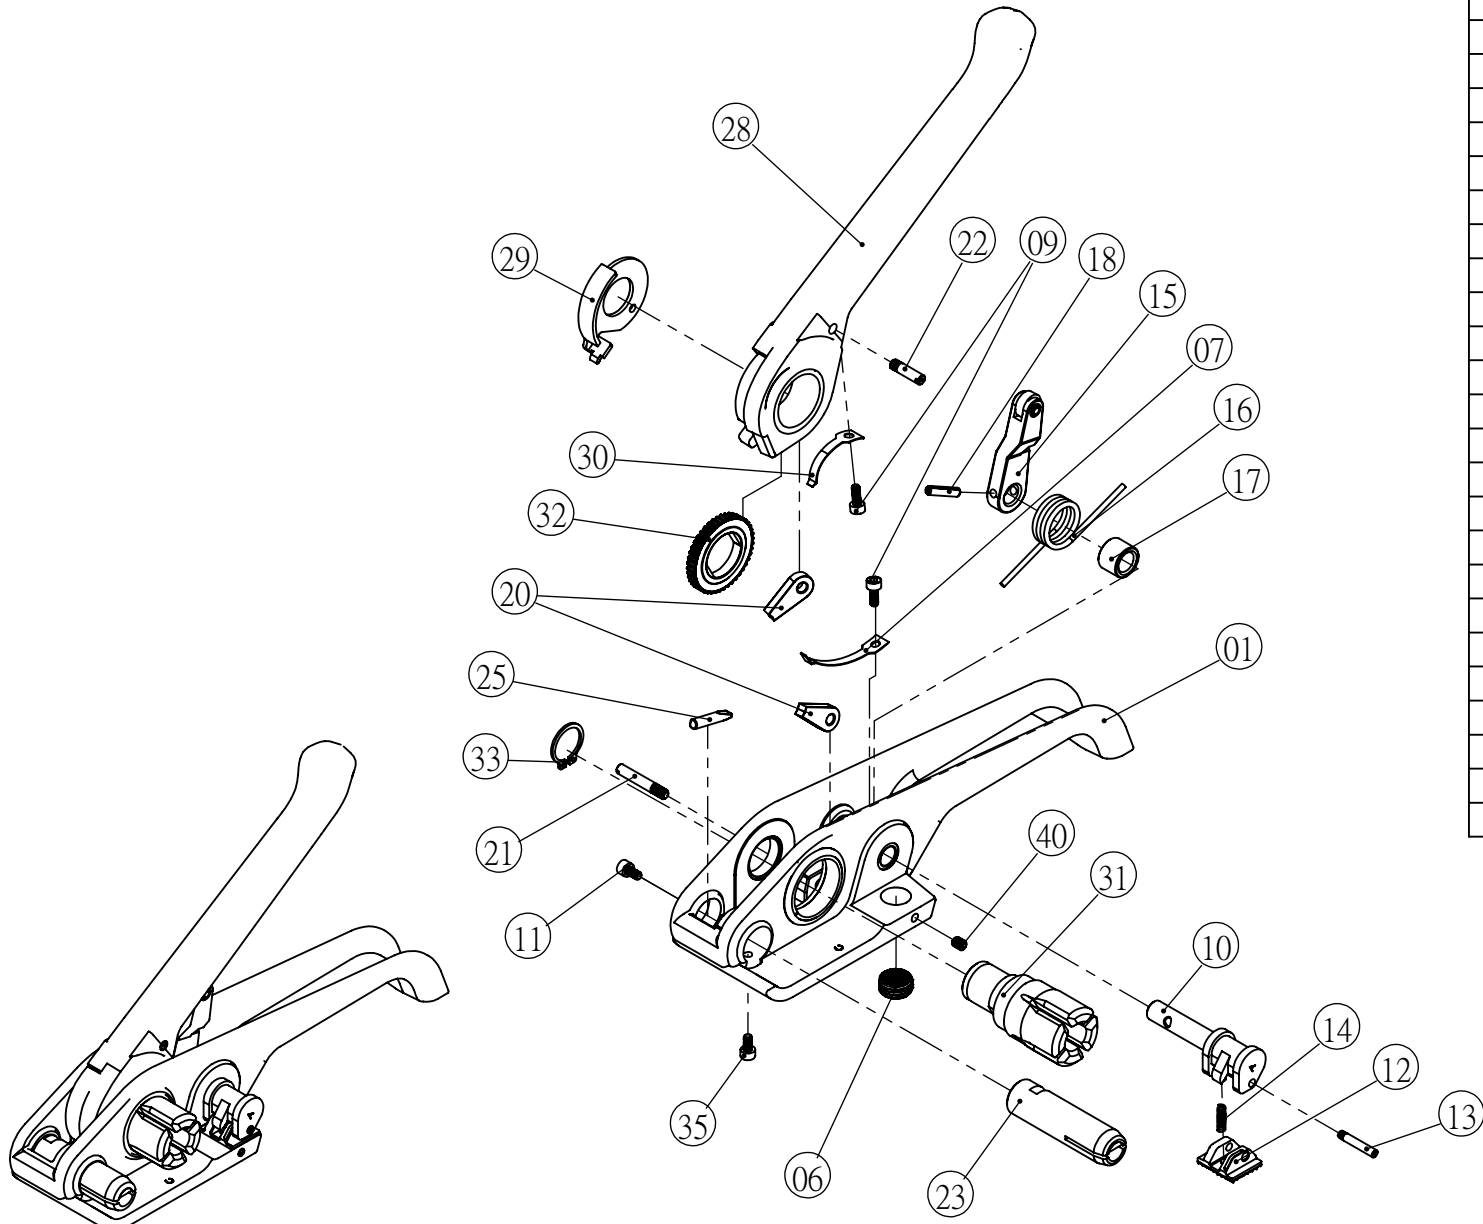


Part No.	Part Name	QTY
01	Base	1
06	Base Plug	1
07	Base Toggle Spring	1
09	Screw	2
10	Leg	1
11	Screw	1
12	Gripper	1
13	Gripper Screw	1
14	Foot Spring	1
15	Lever Release Assembly	1
16	Main Spring	1
17	Main Spring Bushing	1
18	Spring Pin	1
20	Handle Toggle	2
21	Base Shaft	1
22	Handle Shaft	1
23	Cutter & Cutter Housing	1
25	Blade Lever	1
28	Handle	1
29	Nose Hook	1
30	Handle Spring	1
31	Windlass	1
32	Ratchet Wheel	1
33	Clip Ring	1
35	Screw	1
40	Set Screw	1

YYP390-01 V3 1-2


Keep tool well oiled and clean. Please order parts by number and name.

Plastic Strapping Tensioner


OPERATING INSTRUCTIONS

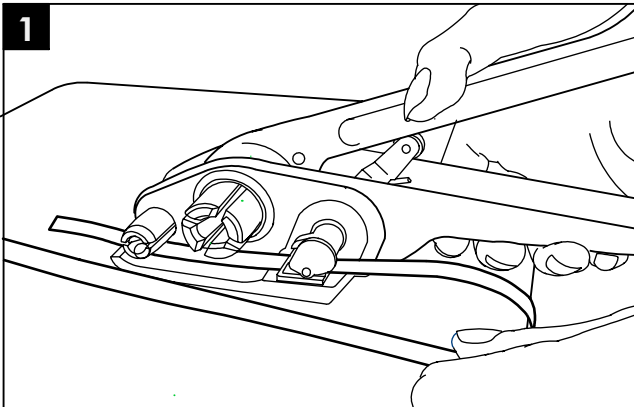


1
Wrap the strap around the container as shown. Squeeze handle and body together to lift the leg so the strap can be placed under the gripper plate and cutter.

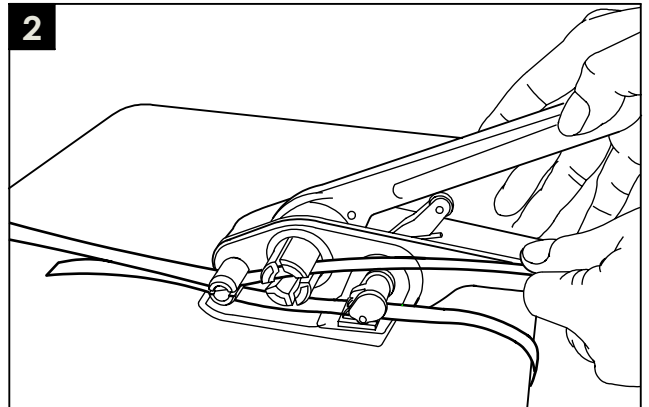


2
Release the handle and base to secure strap. Feed the other end of strap through the slot of cutter and windlass. Pull strapping as tight as possible by hand.

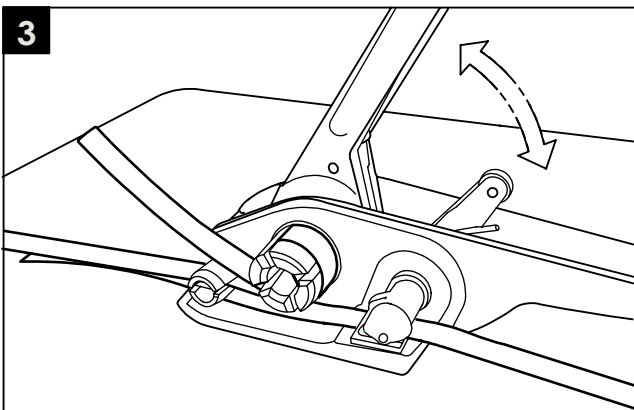


3
Hold the tool with left hand. Move handle back and forth until strapping has reached desired tension.

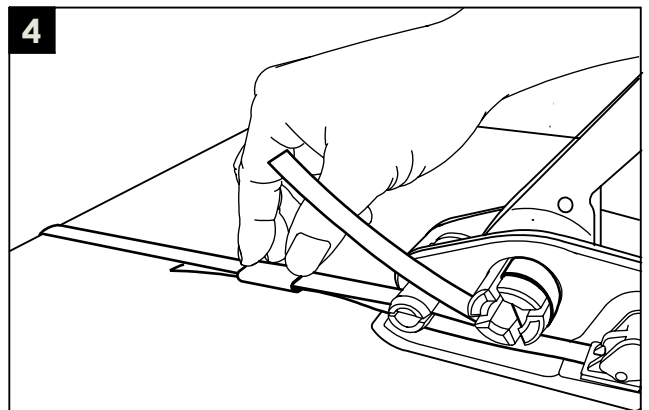

4
Place seal open side down over both straps in front of the tool.

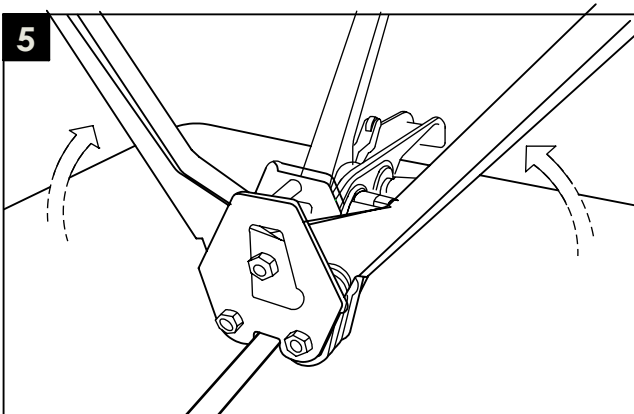

5
Open fully the sealer and place it on the top of seal. Close the sealer to crimp tightly the seal and strap.

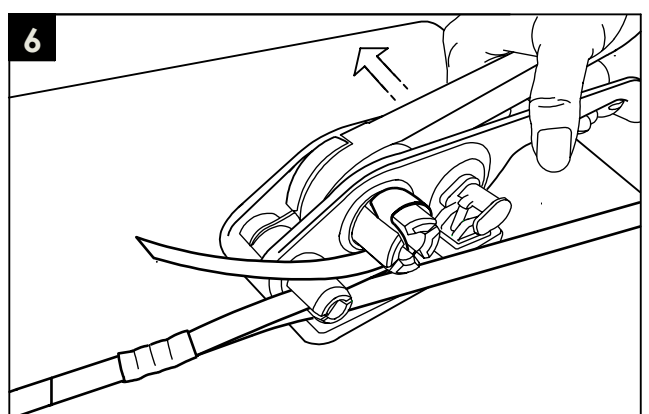

6
Squeeze the handle and base together to cut the strap and then slide the tool to the right.